

# BRAUM

## INSTALLATION GUIDE

2008+ Nissan 370 Harness Bar [BRHB-37]

## RECOMMENDED TOOLS


Socket Wrench (14 & 13mm)

Allen Key (6mm)

Flat Head Screwdriver

This harness bar is sold without warranty expressed or implied. No warranty or representation is made as to this product's ability to protect the user from possible injury or even death. The effectiveness, warranty and longevity of this equipment are directly related to the manner in which it is installed, used, and/or maintained. **THE USER ASSUMES ALL RISK.**


Step 1: Use the Flathead Screwdriver to remove the plastic cover.

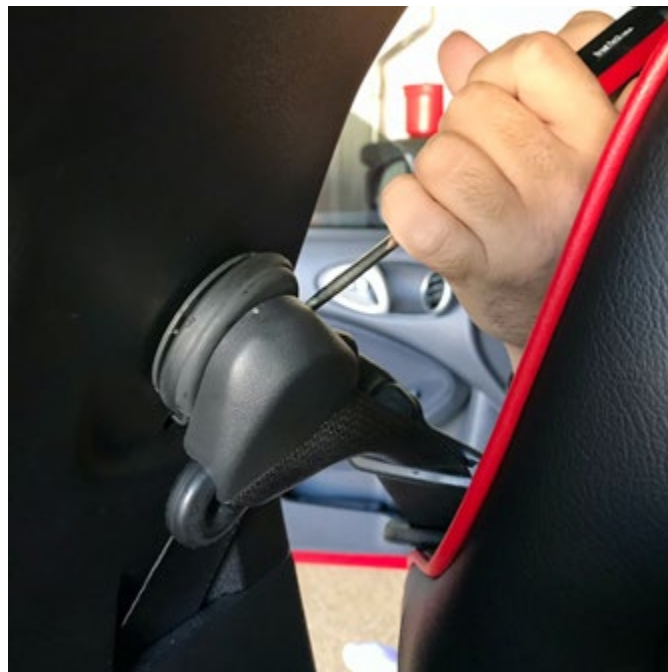

Step 2: Use 14mm socket wrench to take off seat belt top mounts on both sides.



Step 3: Use OEM top seat belt mount bolt and spacer (14mm) and tighten the harness bar in on both sides. (There should be an additional spacer that BRAUM provides if you do not plan to use your OEM seat belt)

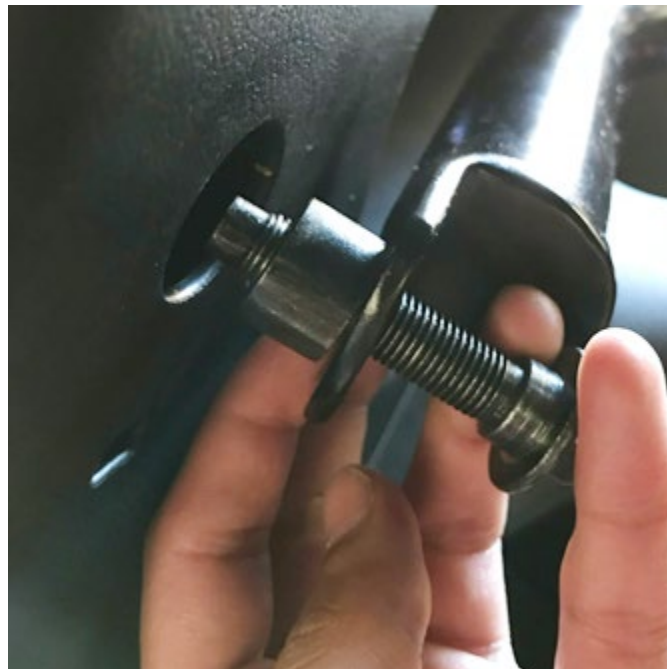

Step 4: Secure the top of the support arms to the harness bar using Allen Key (6mm).



Step 5: Secure the bottom of the support arms to the chassis points in the spare tire compartment using the 13mm socket wrench.



Final product installed will look like this.



If you have any installation questions, please contact us at 213-550-3295 or [info@braumracing.com](mailto:info@braumracing.com)